



Caprail for Glass Installation Instructions

Before You Begin

Make sure you read all of the instructions and have all your product components and pieces nearby and handy. As soon as you start the process, you will not have much leeway time.

Note: You will need something that will act as a lubricant for only a few minutes and not leave any residue. We recommend glass cleaner for this install (Windex for example).

Using any silicone-based product (like WD-40) will make your cap fall off.

Included Items

Caprail
Rubber Gasket

Step-By-Step Instructions

1. Cut your rubber gasket (and cap if not already cut) to the length of your run of glass panels.
2. Take your rubber gasket, line it up with the edge of the glass, and place it on top of your glass. It is important to do only one section at a time.
3. Saturate the outside of the rubber gasket with the glass cleaner. Soak it completely; using too much is better than using too little.
Important note: You will want to move from step 3 to step 4 as quickly as possible. Do NOT give the glass cleaner time to dry.
4. Align your metal or wood cap with the edge of the glass panel and place it on top of the rubber gasket right away. Start at the aligned end and press the metal cap on with firm hand pressure. Continue pressing along the metal cap until the whole cap is on and seated all the way down onto the rubber gasket.
5. For a finished look, miter the end of the last (or first) length of cap and cut a small section of the cap at a reciprocal angle (90 minus the angle of your cap rail miter) to run down the front edge of the glass. (see figure 1)

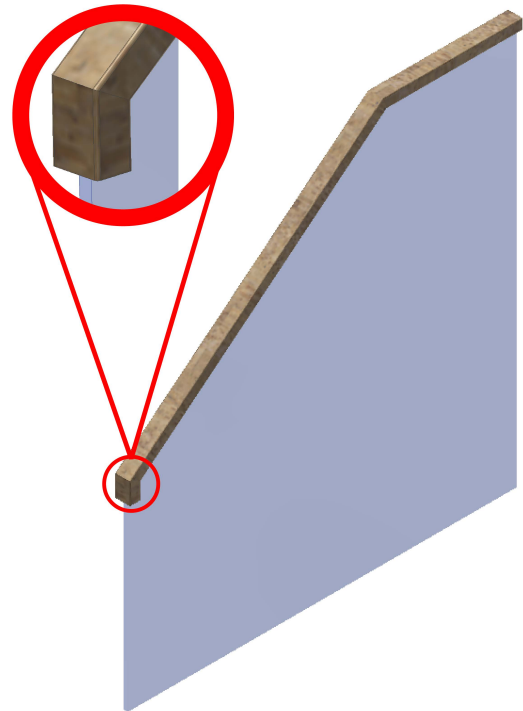


Figure 1